

KITCHEN●ORIGINALS

by Kalorik



**1.7L Glass Jar Blender
Painted Stainless Steel**



I/B Version
151019

220-240V~ 50Hz 400W

Know Your Appliance



1. Locking cap with lid feed for additional ingredients
2. Removable plastic lid
3. 1.7L calibrated glass mixing jug
4. Durable copper motor unit
5. Speed control rotary dial (P / 0 / 1 / 2 / 3)
6. Anti slip feet
7. Interlocking safety switch
8. Removable blade positioning ring
9. Removable stainless steel blades

- Please note that the pattern / colour of your product may differ to as shown above.
- These user instructions apply regardless of pattern / colour.

IMPORTANT SAFEGUARDS

Please read these instructions carefully before using the appliance, and always follow the safety and operating instructions.

Important: *This appliance can be used by children over 8 years old and people with reduced physical, sensory or mental capacities or with a lack of experience or knowledge if they have been given supervision or instructions concerning the safe use of the appliance and the risks involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised. Never leave the appliance and its cord unsupervised and within reach of children less than 8 years old or irresponsible persons when it is plugged into the wall or when it is cooling down.*

- ❑ Check that your mains voltage corresponds to that stated on the appliance.
- ❑ Read all instructions carefully, even if you are familiar with the appliance.
- ❑ Never leave the appliance unsupervised when in use.
- ❑ From time to time check the appliance for damages. Never use the appliance if cord or appliance shows any signs of damage. In that case, repairs should be made by a competent qualified electrician(*). Should the cord be damaged, it must be replaced by a competent qualified electrician(*) in order to avoid all danger.
- ❑ Only use the appliance for domestic purposes and in the way indicated in these instructions.
- ❑ Never immerse the motor base of your appliance in water or any other liquid for any reason whatsoever.
- ❑ Never use the appliance near hot surfaces.
- ❑ Never use the appliance outside and always place it in a dry environment.
- ❑ Never use accessories that are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.

- ❑ Never move the appliance by pulling the power cord. Make sure the cord cannot get caught in any way. Do not wind the cord around the appliance and do not bend it.
- ❑ Always unplug the appliance from the power supply when it is not in use, especially if you leave the appliance unsupervised or if you assemble or disassemble it or before cleaning it.
- ❑ Only blend consumable food, and do not use the appliance for mixing paints or other flammable liquids or in a place contaminated with flammable gases or vapours.
- ❑ It is absolutely necessary to keep this appliance clean at all times as it comes into direct contact with food.
- ❑ Make sure the appliance is unplugged before inserting, removing or cleaning the calibrated glass mixing jug.
- ❑ Do not allow the cord to hang over the edge of table or counter, or touch hot surfaces.
- ❑ Do not place the unit on or near to a gas or electric burner or a heated oven.
- ❑ The calibrated glass jug should be mounted correctly on the motor base before you plug the appliance into the mains power source. The appliance is equipped with a safety switch, which prevents the calibrated glass mixing jug from working if incorrectly mounted.
- ❑ Avoid contact with moving parts. Keep hands, hair, clothing as well as spatulas and other utensils away during operation to prevent injury and / or damage to the appliance.
- ❑ Do not insert any non consumables into the calibrated glass jar when the product is in use.
- ❑ The use of attachments or accessories not recommended or sold with this appliance may result in fire, electrical shock or injury.
- ❑ Ensure that the unit is switched off and unplugged after use. Make sure that the motor has stopped completely before disassembling.
- ❑ Attention: the blades are sharp and therefore it is necessary to take particular precautions when using or cleaning. Be careful when removing the blade unit from the motor base and always wear gloves when cleaning the blades.
- ❑ Do not use abrasive cleaners or scouring pads on appliance.
- ❑ Do not put any hot liquids into the appliance.
- ❑ Do not remove the blade unit from the blade positioning ring.

- ❑ Always ensure that the calibrated glass mixing jug is tightly sealed with the plastic lid and that the additional ingredient inlet is locked when in use.
- ❑ Always close and hold the lid of the calibrated glass mixing jug before starting to blend. In case the lid loosens during operation, unplug the appliance and remove the lid to release built-up pressure. Ensure that you replace the lid prior to resuming blending.
- ❑ The appliance is designed for the preparation of small quantities of food. It is not designed for the preparation of large quantities at once.
- ❑ Do not touch the blades while the appliance is operating and do not try to block their movement in any way. Do not use any additional mixing implements to assist the blending.
- ❑ Do not use the appliance without any food in it.

(*) Competent qualified electrician: after-sales department of the producer or importer or any person who is qualified, approved and competent to perform repairs in order to avoid all danger. If necessary you should return the appliance to the electrician.

IMPORTANT INFORMATION

This appliance is not for professional use. You should follow the requested breaks. Failure to follow this instruction carefully may result in damage to the motor. Please refer to the rating label for the maximum continuous usage time (KB xx min where xx is the maximum usage time). The breaks should last at least 10 minutes.

BE CAREFUL!

Your appliance is fitted with a security device on the calibrated glass mixing jug allowing the functioning of the appliance only when the jug is correctly placed on the motor base. If those conditions are met and the appliance does not start, call your after sales service.

OPERATIONAL USE

If the blade is disassembled from the bottom of the jar, check the cleaning section for mounting instructions before continuing.

- Assemble the calibrated glass mixing jug on the motor block. You should place the symbol ▼ on the calibrated glass jug plastic base in front of the opened padlock 🔒 on the motor unit and then screw the calibrated glass jug to the motor unit so that the closed padlock 🔒 ends up in front of the symbol ▼. To check if it has been done correctly, it should be possible to raise the motor block with the handle of the calibrated glass mixing jug.
- Remove the lid of the blender.
- Fill the calibrated glass mixing jug with the chosen ingredients.
- Close the lid.
- Ensure the switch is at '0' on the speed control rotary dial.

- Plug the appliance into a suitable socket.
- To avoid contents from overflowing, use the capacity guide on the calibrated glass mixing jug. Do not exceed 1.7L.
- Do not blend hot liquids.
- Place the lid and locking cap securely onto the calibrated glass mixing jug.
- Choose the mixing speed with the button on the motor base. Position "0" corresponds to stopping the appliance, position "1" to a slow speed and position "3" to a fast speed.
- Use position "P" (Pulse) for greater control in short blending jobs. "P" must be held in position for the blender to run. To prevent over blundering of foods, use the pulse switch. The blender will stop when the switch is released from grip.
- "P" is also a suitable and recommended setting for ice crush. To use the ice crush function, begin with ice cubes no larger than 2cm³. Do not fill the blender past the 500ml mark. Once the lid is closed firmly, use position "P" for 2 seconds, then leave to rest 2 seconds. Repeat until ice is crushed to the desired size.
- Additional ingredients and liquids can be added whilst blending through the additional ingredients inlet in the plastic lid, or you can remove the lid to allow dry foods through this larger inlet. Take care not to overload the cutter blades. Ensure that the food to be blended is not too thick.
- Once you have finished the preparation, stop the appliance (position "0") and unplug the appliance.
- Remove the jug from the base. Then remove the lid and pour the liquid in the desired receptacle.

USEFUL INFORMATION

- Always wait until the unit has cooled to room temperature before performing the next operation cycle.
- The plastic lid should always be in place whilst blending.
- Switch off and unplug the unit before removing the contents of the calibrated glass mixing jug.
- Do not switch the blender on if the jug is empty. The blade unit may be damaged if operated without load.
- Cut cooked meats into one centimetre before adding into the jug. Do not add raw meats.
- Do not use the blender for storing beverages or foods.

HOW TO CLEAN

- Always unplug from outlet before cleaning.
- For a quick rinsing of the calibrated glass mixing jug (for example between two preparations), you can use clear, lukewarm water and switch on your appliance for a few seconds. In this case, do not use any detergent.
- For a thorough cleaning, remove the calibrated glass mixing jug from the motor block and turn the removable blade positioning ring on the bottom of the jug anti-clockwise to detach the sealing ring and the stainless steel blade (this will make the cleaning easier and safer). You may then clean these parts with soapy water and rinse thoroughly with clear water; ensuring protective gloves are worn at all times. Alternatively you can remove the blades and calibrated glass jug as instructed above, and place these parts only into the dishwasher. Dry before reassembling. To attach the blades, put the sealing ring around the blades, insert them in the bottom of the calibrated glass jug and tighten the removable blade positioning ring by turning it clockwise (tighten vigorously in order to avoid leaks). Caution, do not lose the seal during this operation.
- You can wipe the motor block with a soft damp cloth.

STORING

- The appliance should not be stored whilst hot or plugged in. When not in use, allow the appliance to cool, and then put it back into the box and store out of reach of children in a safe, dry place.

CONNECTION TO POWER

- Before connecting, check that the voltage indicated on the appliance (highlighted on the rating label situated on the bottom of the appliance) corresponds with the main voltage in your home. If this is not the case, consult your dealer and do not use.
- This equipment must be disconnected from the mains when not in use. Do not allow this unit to be exposed to rain or moisture.

For your own safety, read the following instructions carefully before attempting to connect this unit to the mains

UK STYLE PLUG WIRING INSTRUCTIONS (IN THE UK ONLY)

You must only plug the appliance into a 220-240V, 50Hz power supply. Connecting it to other power sources may damage the appliance.

This product must only be used from a 13 amp power socket. If a BS1363 approved 13 amp plug is used, it should be fitted with a 13 amp fuse conforming to BS1362 and be ASTA approved.

IMPORTANT



The wires on the power cord are colour coded:

blue = neutral, brown = live, green or green & yellow = earth.

The blue wire must be connected to the terminal marked N or coloured in black.


The brown wire must be connected to the terminal marked L or coloured in red.

The green (& yellow) wire must be connected to the terminal marked E or coloured in green (& yellow).

PROTECTION OF THE ENVIRONMENT – DIRECTIVE 2012/19/EU

In order to preserve our environment and protect human health, the waste electrical and electronic equipment should be disposed of in accordance with specific rules with the



implication of both suppliers and users. For this reason, as indicated by the symbol  on the rating label or on the packaging, your appliance should not be disposed of as unsorted municipal waste. The user has the right to bring it to a municipal collection point performing waste recovery by means of reuse, recycling or use for other applications in accordance with the directive.

ErP Declaration – Regulation 1275/2008/EC

We, Team Kalorik SA/NV, hereby confirm that our product meets the requirements of regulation 1275/2008/EC. Admittedly, our product does not dispose of a function to minimize the power consumption, which should according to regulation 1275/2008/EC put the product in off or standby mode after finishing the main function, but this is practically impossible, as it would compromise the main function of the product so strongly, that using the product would no longer be possible!

For this reason we always tell the customer in our instruction manual to unplug the appliance immediately after use.

GUARANTEE

This product is guaranteed against manufacturing defects for a period of 1 year.

This does not cover the product where the fault is due to misuse, abuse, use in contravention of the instructions, or where the product has been the subject of unauthorised modifications or alterations, or has been the subject of commercial use.

In the unlikely event of a problem with the product within the guarantee period please return it to the **place of purchase**. If the item is shown to have had an inherent defect present at the time of sale, the seller will provide you with a replacement. Your statutory rights remain unaffected.

Guarantor:

Team KALORIK S.A.

Address: 1, Av. de l'Espinette Centrale, B-1640 Rhode St Gènese, Brussels, Belgium

UK TELEPHONE HELPLINE: 01625 531 820

The user manual is by simple request also available in electronic format from the after-sales service (see warranty card).